 


ROKENBOK®
TOY COMPANY

 
 
RC FIRE & RESCUE

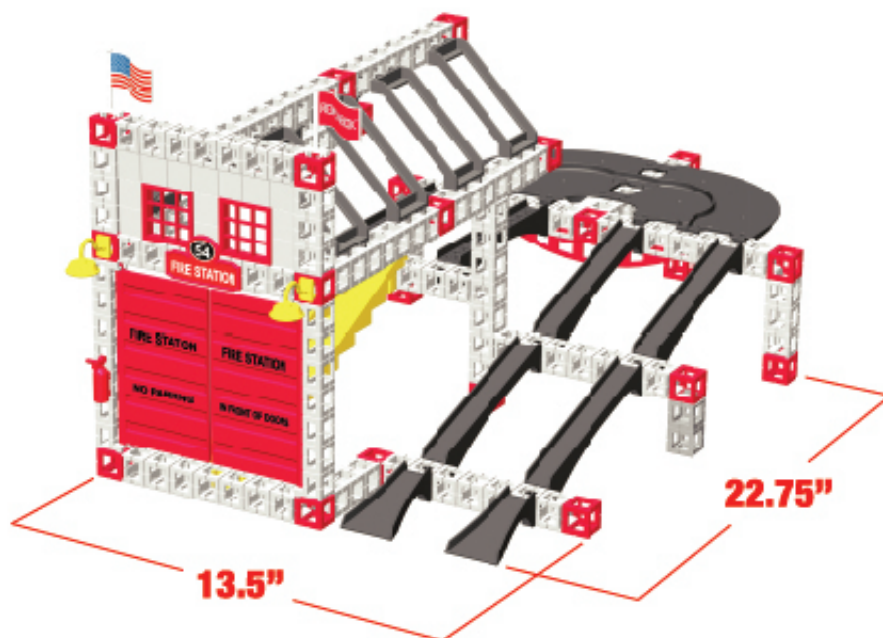



Color of building pieces may differ from those shown.





1

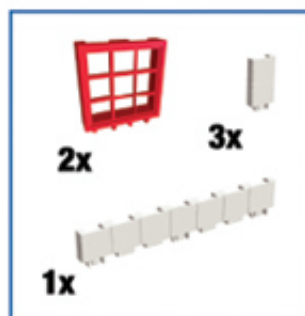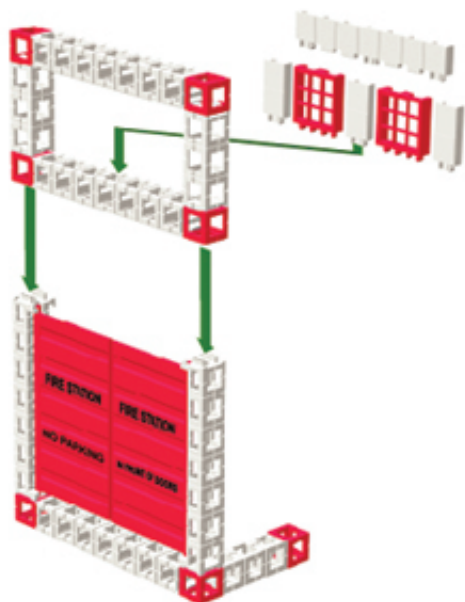


2

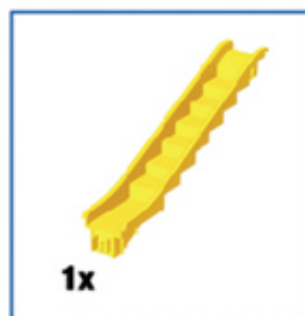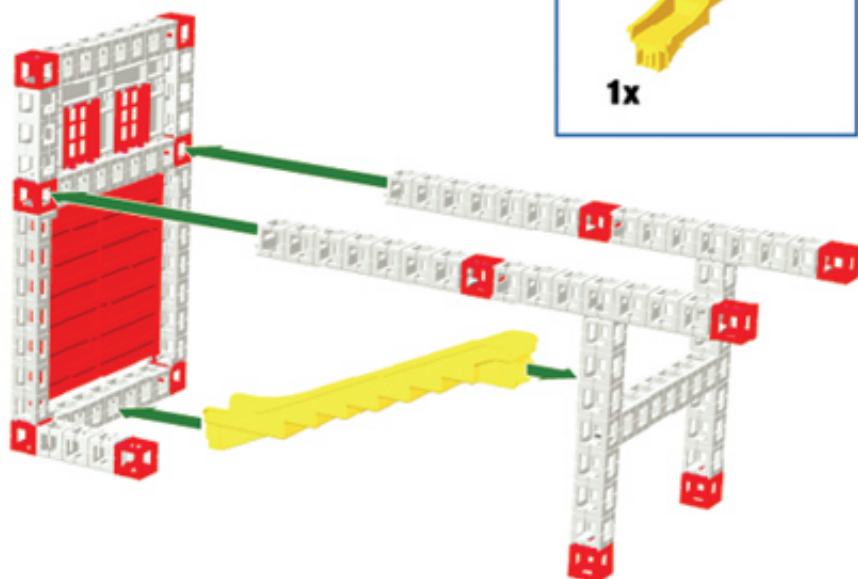  



3

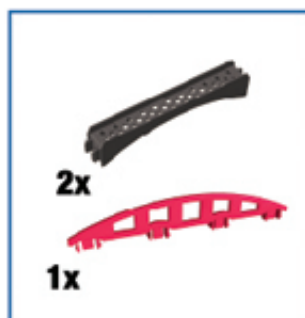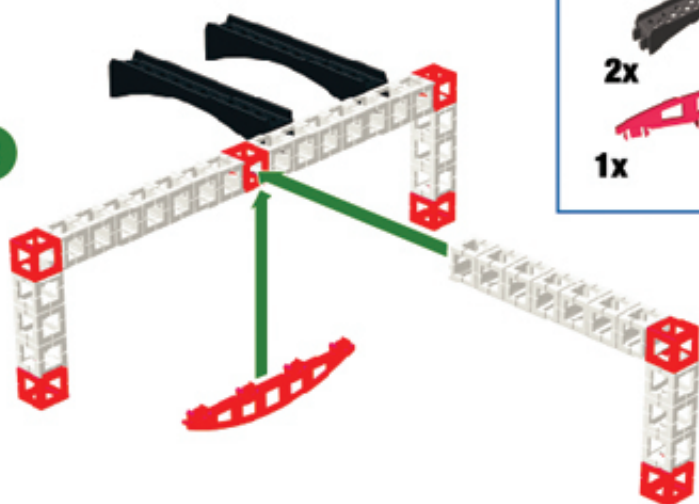  


4

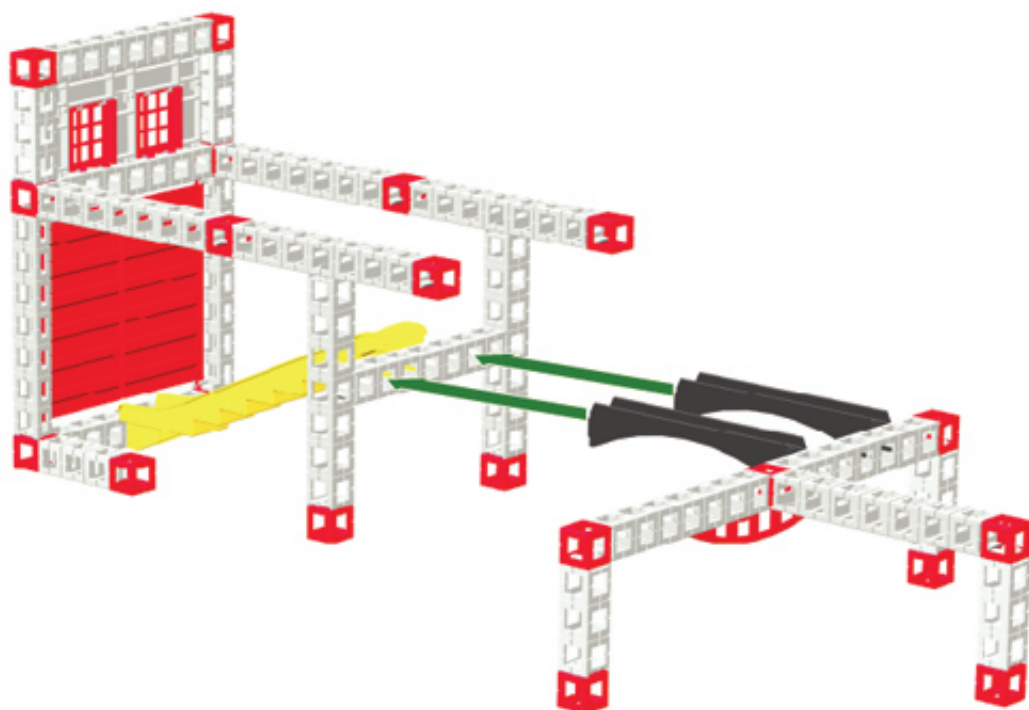 


5

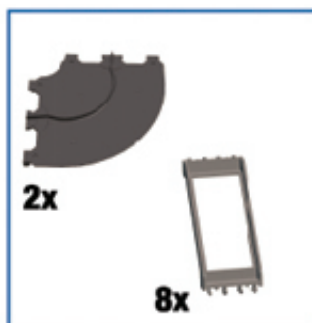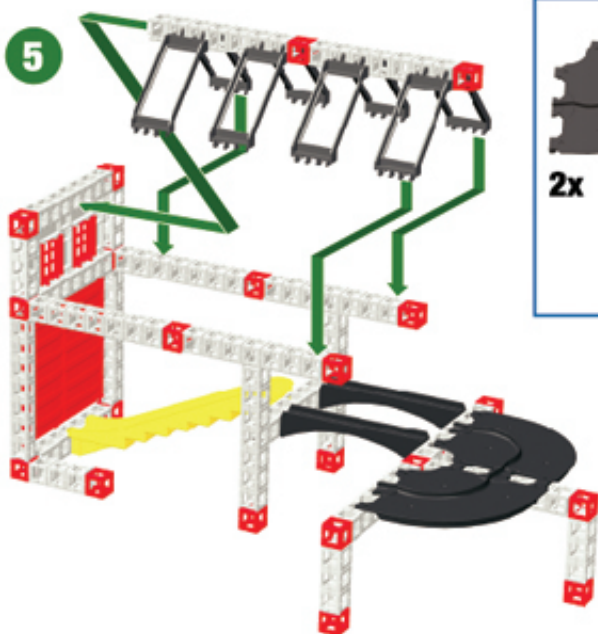  


6

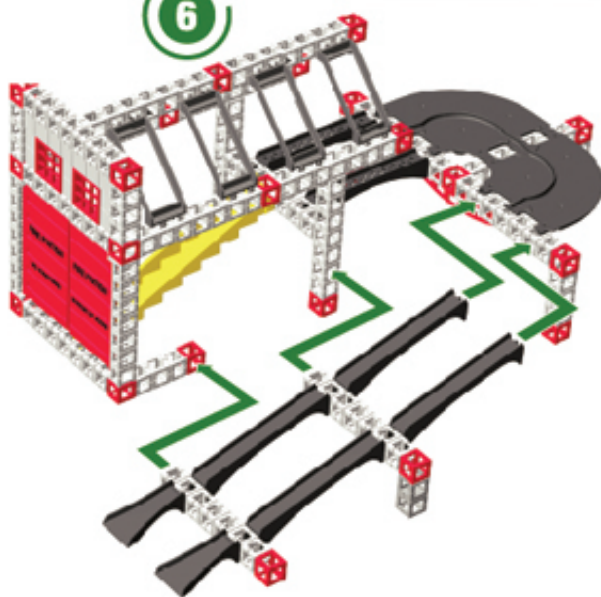 

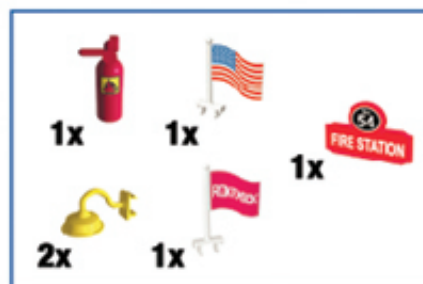 



 
- Rokenbok recommends premium alkaline batteries for use in your RC vehicle.
- Batteries are to be inserted with correct polarity as shown.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or nickel cadmium batteries.

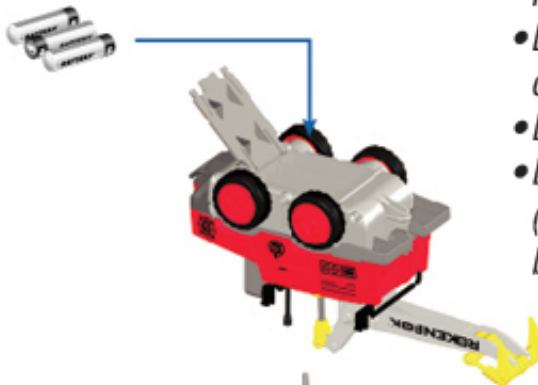

Rokenbok Radio Control Center and Control Pad required, not included.



 Three Control Pad ports for additional players.

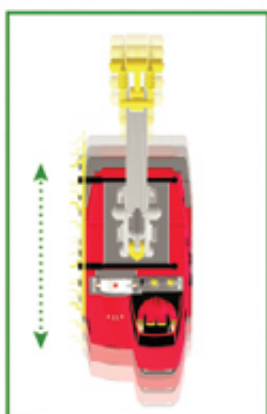

Previous Vehicle Selection Push to Slow



"X" Turns Siren ON

Push "A" to Turn Flashing Lights ON
Push "B" to Turn Flashing Lights OFF

