


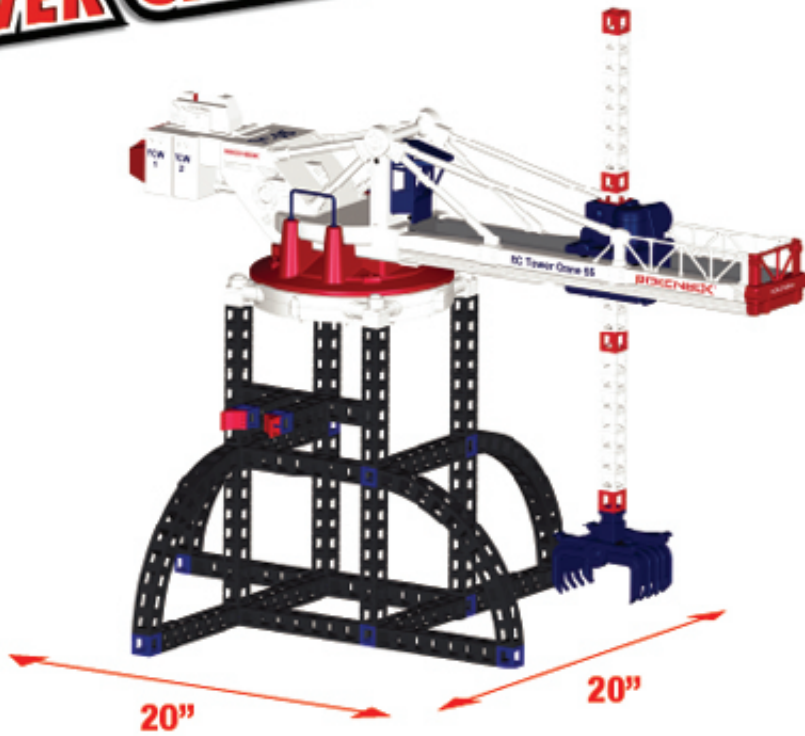


















RC TOWER CRANE



 10x	 10x	 3x	 14x	 4x	 2x	 1x	 1x	 1x
 2x	 20x	 4x	 3x	 1x				
 1x	 2x	 1x	 1x					


Color of building pieces may differ from those shown.

WARNING:
CHOKING HAZARD.
 Toy contains small parts and small balls. Not for children under 3 years.



Assembling the Base

Push pieces together to assemble.

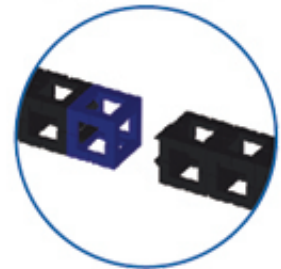


Use the Rokenbok tool to assist with disassembly.




1




2

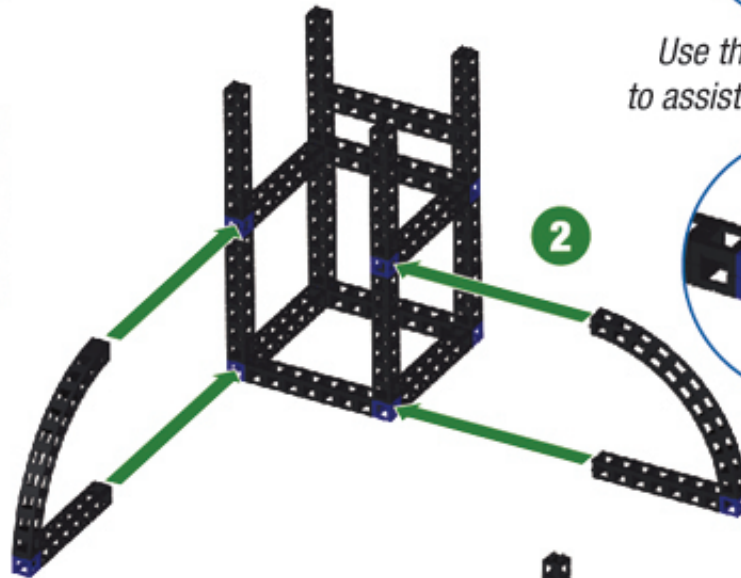



3

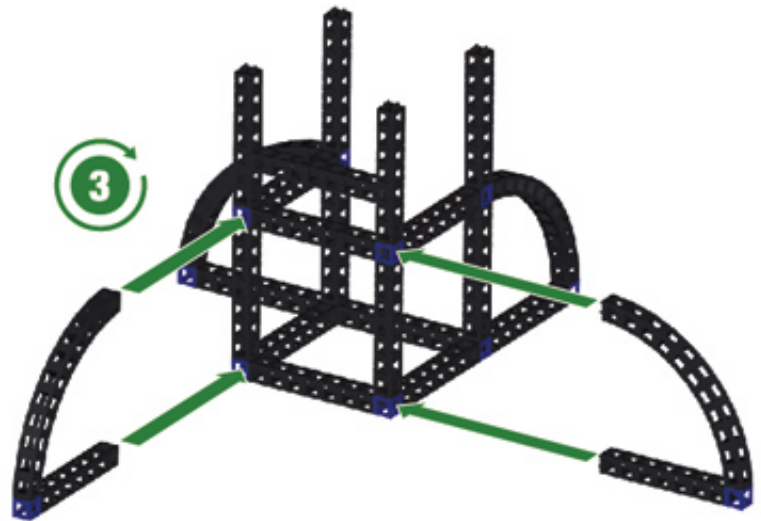


4

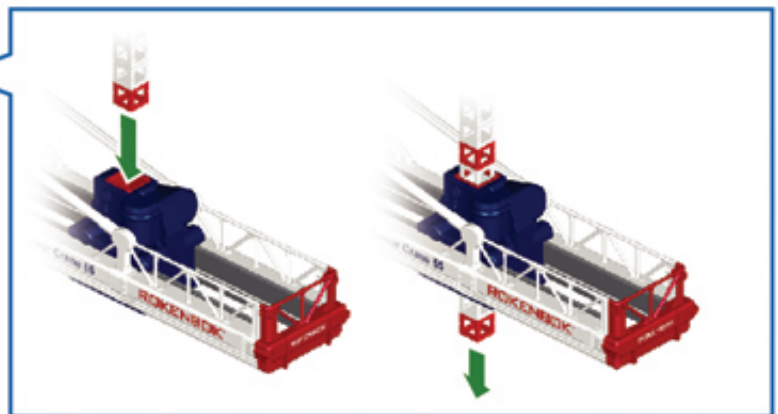


Attaching the Claw

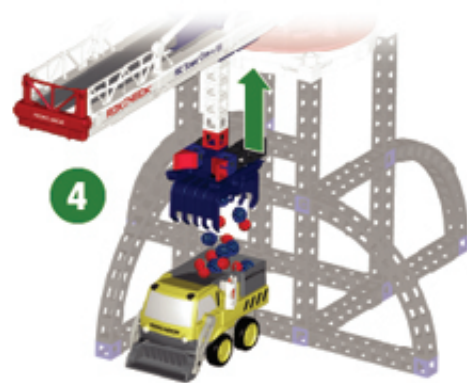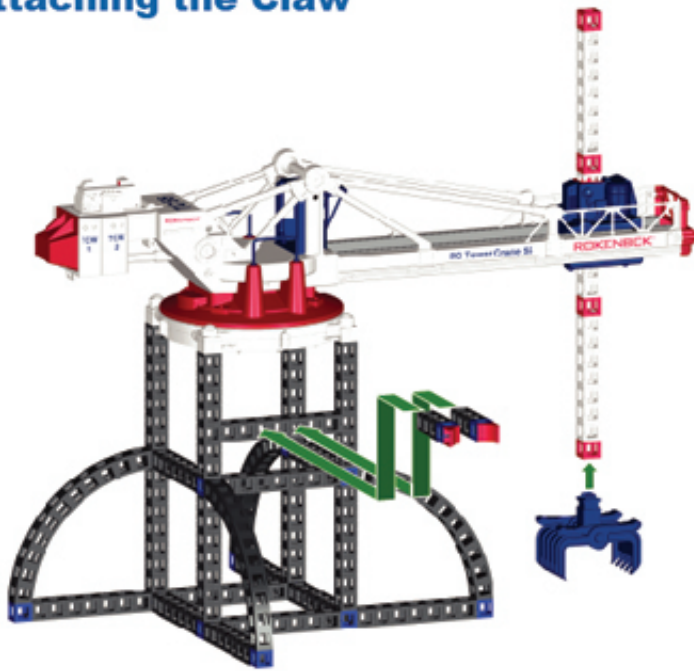


Attaching the Bucket

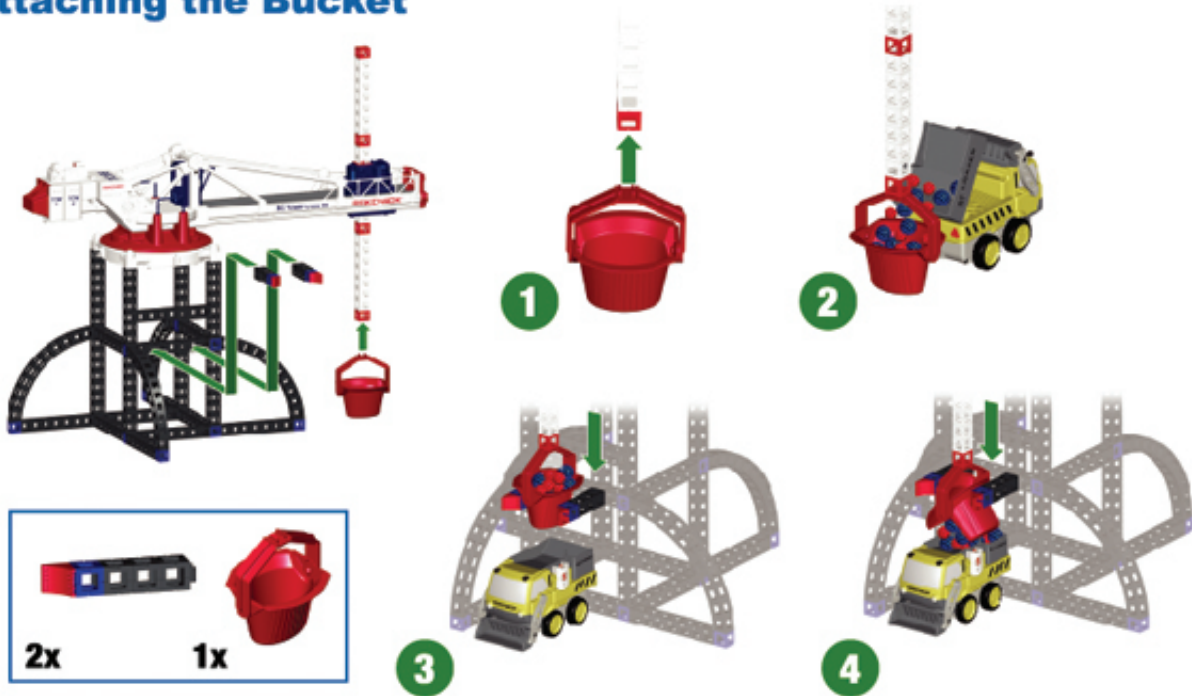

Attaching the Hook

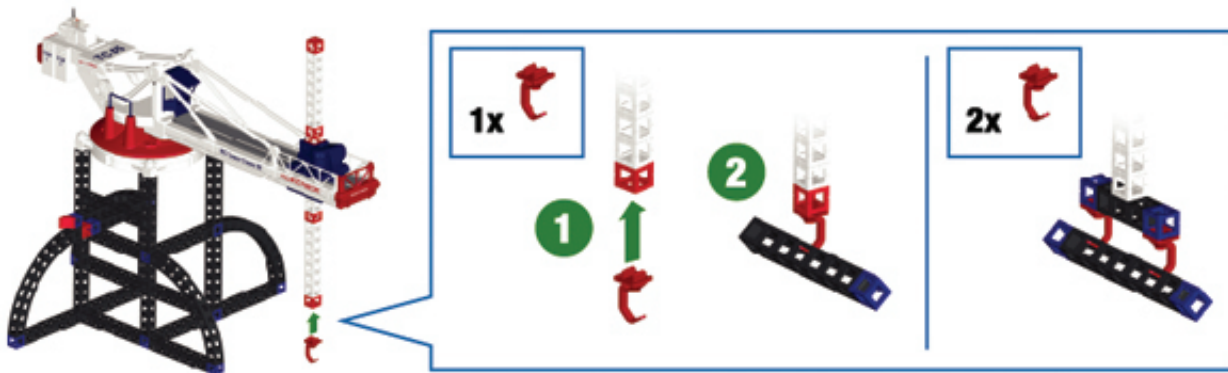


Attaching the Platform

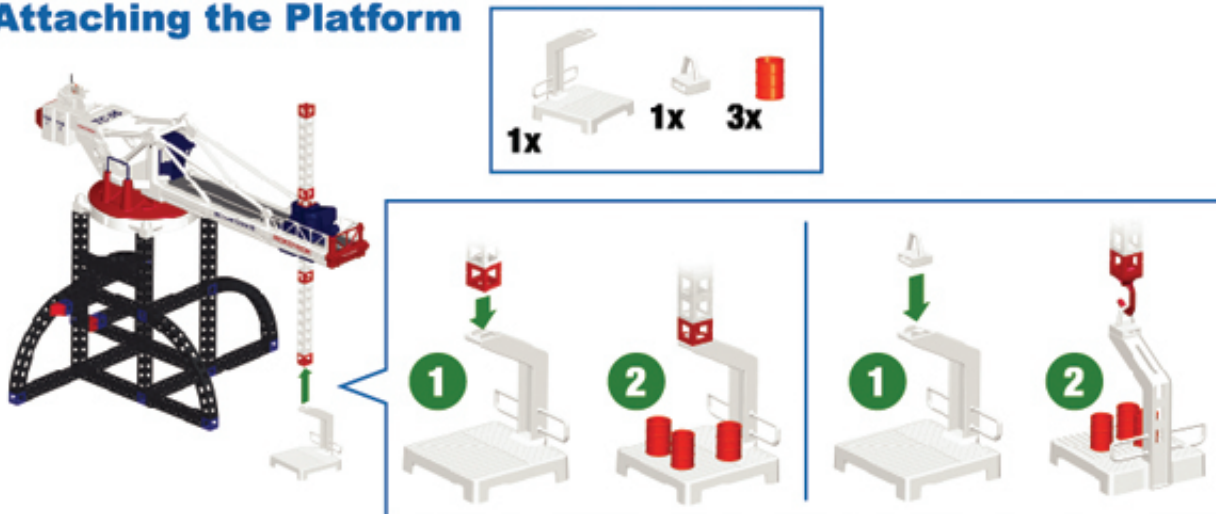



3x-AA
NOT INCLUDED

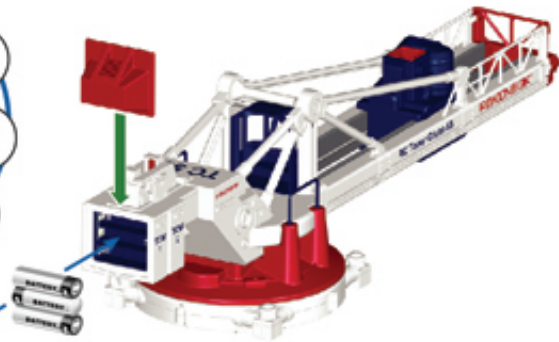


- Rokenbok recommends premium alkaline batteries for use in your RC Tower Crane.
- Batteries are to be inserted with correct polarity as shown.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or nickel cadmium batteries.

Rokenbok Radio Control Center and Control Pad required, not included.



Three Control Pad ports for additional players.

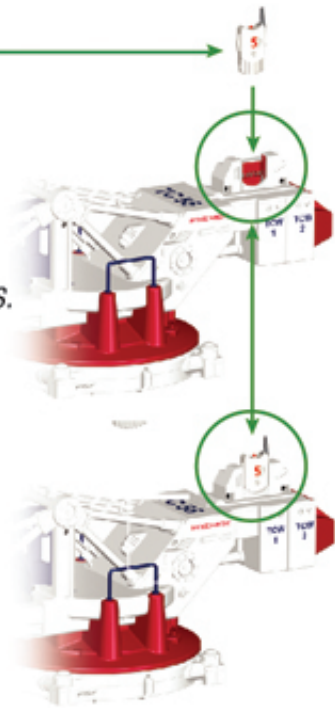


Previous Vehicle Selection



Push to Slow

X/Y

Push X/Y to Move Shuttle Back and Forth

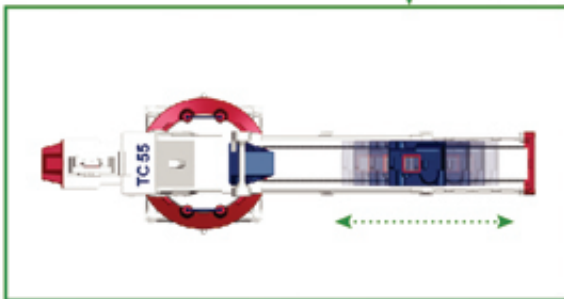

A/B

Push A/B to Raise and Lower Payload

